

ABB Control pricelist 2015

| Model | Description | Pricelist 2015 |
|-----------------------------------|-------------|----------------|
| Manual Motor Starter MS116 | | |
| MS116-0.16 | 0.1-0.16A | 1,610 |
| MS116-0.25 | 0.16-0.25A | 1,610 |
| MS116-0.4 | 0.25-0.4A | 1,610 |
| MS116-0.63 | 0.4-0.63A | 1,610 |
| MS116-1.0 | 0.63-1.0A | 1,720 |
| MS116-1.6 | 1.0-1.6A | 1,720 |
| MS116-2.5 | 1.6-2.5A | 1,720 |
| MS116-4.0 | 2.5-4.0A | 1,720 |
| MS116-6.3 | 4.0-6.3A | 1,720 |
| MS116-10.0 | 6.3-10.0A | 2,010 |
| MS116-12.0 | 8.0-12.0A | 2,010 |
| MS116-16.0 | 10.0-16.0A | 2,010 |
| MS116-20 | 16.0-20.0A | 2,600 |
| MS116-25 | 20.0-25.0A | 2,860 |
| MS116-32 | 25.0-32.0A | 3,510 |
| Manual Motor Starter MS132 | | |
| MS132-0.16 | 0.1-0.16A | 1,990 |
| MS132-0.25 | 0.16-0.25A | 1,990 |
| MS132-0.4 | 0.25-0.4A | 1,990 |
| MS132-0.63 | 0.4-0.63A | 1,990 |
| MS132-1.0 | 0.63-1.0A | 2,100 |
| MS132-1.6 | 1.0-1.6A | 2,100 |
| MS132-2.5 | 1.6-2.5A | 2,100 |
| MS132-4.0 | 2.5-4.0A | 2,100 |
| MS132-6.3 | 4.0-6.3A | 2,100 |
| MS132-10 | 6.3-10.0A | 2,500 |
| MS132-12 | 8.0-12.0A | 2,500 |
| MS132-16 | 10.0-16.0A | 2,500 |
| MS132-20 | 16.0-20.0A | 2,700 |
| MS132-25 | 20.0-25.0A | 3,040 |
| MS132-32 | 25.0-32.0A | 3,820 |
| Manual Motor Starter MO132 | | |
| MO132-0.16 | 0.16A | 1,890 |
| MO132-0.25 | 0.25A | 1,890 |
| MO132-0.4 | 0.4A | 1,890 |
| MO132-0.63 | 0.63A | 1,890 |
| MO132-1.0 | 1A | 2,020 |
| MO132-1.6 | 1.6A | 2,020 |
| MO132-2.5 | 2.5A | 2,020 |
| MO132-4.0 | 4A | 2,020 |
| MO132-6.3 | 6.3A | 2,020 |
| MO132-10 | 10A | 2,410 |
| MO132-12 | 12A | 2,410 |
| MO132-16 | 16A | 2,410 |
| MO132-20 | 20A | 2,580 |
| MO132-25 | 25A | 2,880 |
| MO132-32 | 32A | 3,680 |

ABB Control pricelist 2015

| Model | Description | Pricelist 2015 |
|--|---|----------------|
| Accessories for MS116 & MS132 | | |
| HKF1-11 | Front mount aux.contact 1NO+1NC | 345 |
| HK1-11 | Side mount aux.contact 1NO+1NC | 400 |
| HK1-20 | Side mount aux.contact 2NO | 400 |
| HK1-02 | Side mount aux.contact 2NC | 400 |
| SK1-11 | Side mount trip signal.contact 1NO+1NC | 505 |
| SK1-20 | Side mount trip signal.contact 2NO | 505 |
| SK1-02 | Side mount trip signal.contact 2NC | 505 |
| CK1-11 | Side mount short circuit trip signal.contact 1NO | 600 |
| UA1-24 | under voltage release coil 24V AC | 1,360 |
| UA1-48 | under voltage release coil 48V AC | 1,360 |
| UA1-60 | under voltage release coil 60V AC | 1,360 |
| UA1-120 | under voltage release coil 120V AC | 1,360 |
| UA1-230 | under voltage release coil 230V AC | 1,360 |
| UA1-400 | under voltage release coil 400V AC | 1,360 |
| UA1-415 | under voltage release coil 415V AC | 1,360 |
| AA1-24 | shunt opening release coil 24V AC | 1,360 |
| AA1-110 | shunt opening release coil 110V AC | 1,360 |
| AA1-230 | shunt opening release coil 230V AC | 1,360 |
| AA1-400 | shunt opening release coil 400V AC | 1,360 |
| SA1 | lock handle | 350 |
| SA3 | lock handle | 1,130 |
| BEA16-4 | Connecting Link with MS116, MS132 | 500 |
| BEA26-4 | Connecting Link with MS116, MS132-0.16-10 | 590 |
| BEA38-4 | Connecting Link with MS116, MS132-12-32 | 590 |
| PS1-2-0-65 | Busbar 65A, for 2 devices without auxiliary switch | 350 |
| PS1-3-0-65 | Busbar 65A, for 3 devices without auxiliary switch | 435 |
| PS1-4-0-65 | Busbar 65A, for 4 devices without auxiliary switch | 495 |
| PS1-5-0-65 | Busbar 65A, for 5 devices without auxiliary switch | 565 |
| PS1-2-1-65 | Busbar 65A, for 2 devices with 1 auxiliary switch | 370 |
| PS1-3-1-65 | Busbar 65A, for 3 devices with 1 auxiliary switch | 455 |
| PS1-4-1-65 | Busbar 65A, for 4 devices with 1 auxiliary switch | 515 |
| PS1-5-1-65 | Busbar 65A, for 5 devices with 1 auxiliary switch | 585 |
| PS1-2-2-65 | Busbar 65A, for 2 devices with 2 auxiliary switches | 380 |
| PS1-3-2-65 | Busbar 65A, for 3 devices with 2 auxiliary switches | 490 |
| PS1-4-2-65 | Busbar 65A, for 4 devices with 2 auxiliary switches | 545 |
| PS1-5-2-65 | Busbar 65A, for 5 devices with 2 auxiliary switches | 630 |
| S1-M1-25 | Feeder terminal, flat | 350 |
| S1-M2-25 | Feeder terminal, high | 400 |
| BS1-3 | Protection cover busbar | 150 |
| IB132-G | IP65 enclosure | 1,210 |
| IB132-Y | IP65 enclosure | 1,310 |
| MSHD-LB | Handle, IP64, black, for MS116 | 665 |
| MSHD-LY | Handle, IP64, red/yellow, for MS116 | 665 |
| MSHD-LTB | Handle, IP64, black, for MS132, MO132 | 665 |

ABB Control pricelist 2015

| Model | Description | Pricelist 2015 |
|-----------------------------------|--|----------------|
| OXS6X180 | Shaft, axis 180 mm | 240 |
| MSMN | Driver w. screw | 58 |
| MSOX-32 | Driver shaft | 800 |
| Manual Motor Starter MS4xx | | |
| MS450-40 | 28-40A | 9,200 |
| MS450-45 | 36-45A | 9,600 |
| MS450-50 | 40-50A | 9,900 |
| MS495-63 | 45-63A | 10,600 |
| MS495-75 | 57-75A | 11,300 |
| MS495-90 | 70-90A | 12,000 |
| MS495-100 | 80-100A | 12,600 |
| MS497-40 | 28-40A | 17,200 |
| MS497-50 | 36-50A | 17,200 |
| MS497-63 | 45-63A | 17,500 |
| MS497-75 | 57-75A | 18,200 |
| MS497-90 | 70-90A | 19,200 |
| MS497-100 | 80-100A | 20,000 |
| Accessories for MS4xx | | |
| HK4-11 | Front mount aux.contact 1NO+1NC | 510 |
| HKS4-11 | Side mount aux.contact 1NO+1NC | 510 |
| SK4-11 | Side mount trip signal.contact 1NO+1NC | 1,040 |
| UA4-230 | under voltage release coil 230V AC | 1,550 |
| AA4-230 | shunt opening release coil 230V AC | 1,550 |
| MSHD-LB | Handle, IP64, black, for MS116 | 665 |
| MSHD-LY | Handle, IP64, red/yellow, for MS116 | 665 |
| MSHD-LTB | Handle, IP64, black, for MS132, MO132 | 665 |
| OXS6X180 | Shaft, axis 180 mm | 240 |
| MSMN | Driver w. screw | 58 |
| MSOX-32 | Driver shaft | 800 |